

Universal foot pedals (#115-0002)

Step: 1 Identify the **Left** and **Right** foot pedal before placing them on your unit.




Step: 2 Place each foot pedals on the ATV's footrests and fix them securely as shown here:

Fix a minimum of 2 bolts (4 max) per pedal
in a diagonal fashion



The location of the drilled holes varies
from one ATV to an other.

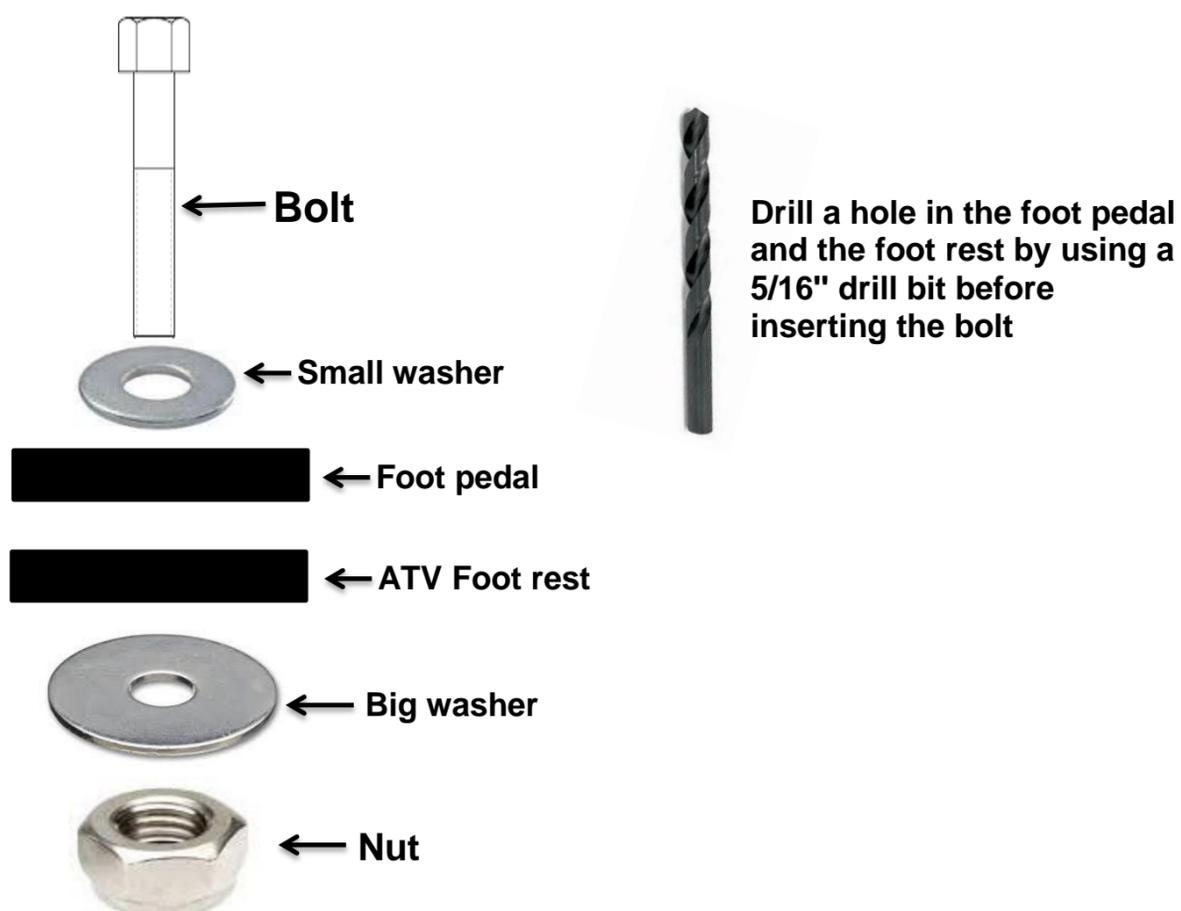

Warning:

Do not stand directly on the foot pedals while vehicle is in use
Make sure both pedals are fixed securely before each ride

Please ride safely !

www.wesindustries.com

service@wesindustries.com